BM2300

vtech

Safe & Sound Digital Audio Baby Monitor

Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions.

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech product. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature rich VTech product.

What's in the box


Install the battery

The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, make sure you use both battery and AC power at the same time. With the battery alone, the parent unit can cordlessly run for a short time only.


ONOTES


- Use only the battery supplied with this product.
- The operating time for using the rechargeable battery is short. If you want to monitor your baby for a long time, we recommend you connect the parent unit to AC power.
- If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage
- CAUTION: Risk of xplosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions


Install the battery as shown below

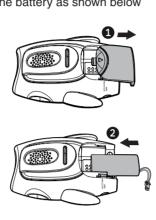





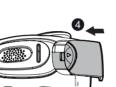


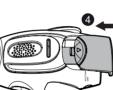

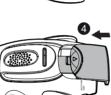

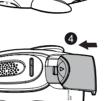


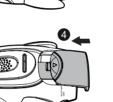


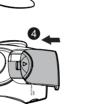


User's manual

0	verview	Ра	rent unit overview	6	MENU OK		ent unit display icons	Parent messag	
Bal	by unit overview				 Press to enter the menu while idle. While in a menu, press to choose an item, or save a setting. 	Til	 Connection status I displays when strong signal strength is detected between the baby unit and the parent unit. 		<u> </u>
		1 2 3 4		7	 While in a menu, press to return to the previous screen. Press to return to idle screen. 		 If displays when moderate signal strength is detected between the baby unit and the parent unit. If displays when the weak signal strength is detected between the 	LOW BATTER	۲ ۲ it
(7		1	LCD panel	8	 Battery level indicator Light on when the battery is being charged. Light flashes when the battery is low 		 baby unit and the parent unit. T flashes when the link between the baby unit and the parent unit is lost. 	NOT LINKED	ר נ נ
(8		2	 On/off Press and hold to power on or off. While in a menu, press to return to 		and needs charging.Light off when no battery is installed.	1	 Full ECO mode Displays when Full ECO Mode is turned on. 	PAGING	r F
		3	idle screen. Microphone	9	 Press to increase the speaker volume. While in a menu, press to scroll up. 	۲	Night lightOn when the night light is turned on.	SAVED	5
1	 Press to decrease the speaker 	4	 Press to decrease the speaker volume. 	10	((パ を Press and hold to talk to the baby unit;	((•))	 Sound alert Displays when the sound alert of the parent unit is turned on. 	SEARCH	ING
2	volume. ひ On/off • <u>Press and hold</u> to power on or off.	5	While in a menu, press to scroll down. Visual sound indicator		release to stop talking.While in a menu, press to return to idle screen.		 Flashes when there are loud sounds detected from the baby unit and the parent unit is in mute. 	TALK	t
3			C C C C The visual sound indicator has two functions. One is to show the sound level	11 12	Power jack Speaker		Vibration alertDisplays when the vibration alert of	TALKBA	t
4	 Night light On when night light is turned on manually. 		detected by the baby unit. The other one is to show the volume level during speaker volume setting.	13 14			the parent unit is turned on.Flashes when there are loud sounds detected from the baby unit.	HI TEMF	; 7 f i:
	Off when night light is turned off manually.		Sound level detected by the baby unit				 Mute Displays when the volume is turned off. 	LOW TEP	
5	 Press to increase the speaker volume. 		 lights indicate a moderate sound level detected by the baby unit. Additional red 				Battery status • → → → → → → → → → → → → →		i t
6	Ò-Press to turn the night light on or off.		lights indicate a higher sound level detected by the baby unit (e.g. baby crying loudly).				the battery is charging.displays solid when the battery is	°F / °C	;
7)) Press to start or stop paging parent unit. 		 Speaker volume level One to three green lights indicate Level 1 to Level 3 of the 				 fully charged. flashes when the battery is charged with AC adaptor, or charging failure. 		(
8	Speaker		 speaker volume setting. O O O O Additional red 				• [] flashes when the battery is in low level and needs charging.		
9 10	Temperature sensor Power jack		lights indicate Level 4 to Level 5 of the speaker volume setting.				No battery icon displays when there is no battery installed.		

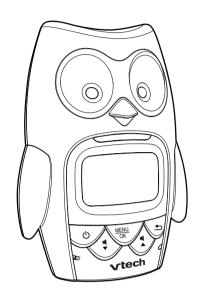

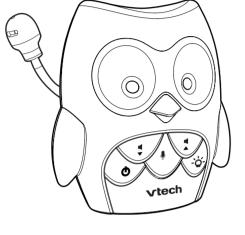

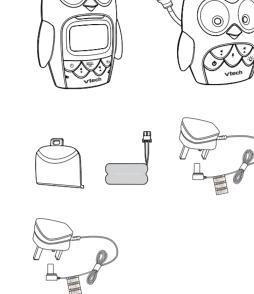

To replace the battery, pull out the battery compartment cover, and then lift up the battery. Follow the previous steps to install the battery.

battery

PNOTES

product.

outlet


Replace the battery

Connect and charge the

- Use only the power adapters supplied with this
- Make sure the electrical outlets are not controlled by wall switches.
- The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet
- Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children.

Connect the baby monitor



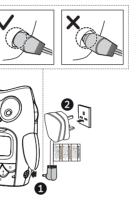

battery status (see the following table). **O**NOTES • The parent unit battery is fully charged after 11 hours of continuous charging. It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging. • The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery Battery Battery Action indicators status The battery No battery is Install the icon is off. installed but parent unit operates using battery. Charge without AC power. interruption (at least 30 minutes). The screen | The battery Charge without has very little interruption displays LOW charge and (about 30 BATTERY may be used minutes). and C for only a short The 🚥 time. light flashes.

The battery is

fully charged.

To keep

the battery

connect it to AC

power when not

charged,

in use.

The battery

becomes

solid **III**.

icon

Charge the parent unit battery

When you have connected the parent unit and

installed its battery for the first time, it powers

on automatically. The battery icon indicates the

Before use


· This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such.

Test your baby monitor

You may test the baby monitor before initial use, and at regular times thereafter.

- For hearing protection, make sure the parent (1) unit is more than 2 metres (6.5 feet) away from the baby unit. If you hear any high-pitched noice, move the parent unit

further until the noise stops. You can also press VOL ▼ on the parent unit to lower or mute the noise.

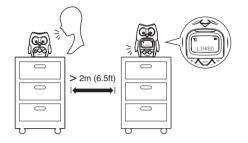

1. Make sure your baby unit and parent unit are


2. Speak towards the microphone of the baby unit. You will hear the sound at the parent unit, and see the visual sound indicators light up.

• When the parent unit displays **NOT LINKED** and $ilde{ extsf{T}}$ flashes, move the parent unit closer to the baby unit (observe the minimum distance of 2 metres/ 6.5 feet). You can also check if the baby monitor is connected to a live power socket and switched on.


 Increase the speaker volume of the parent unit if you cannot hear the sounds transmitted from the baby unit.

Positioning the baby monitor ()CAUTION

- · Keep the baby unit out of the reach of the baby. Never place or mount the baby unit inside the baby's cot or playpen.
- 1. Place the baby unit more than 1 metre (3 feet) away from your baby.

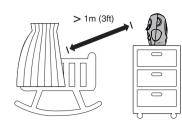

2. Place the parent unit more than 2 metres (6.5 feet) away from the baby unit.

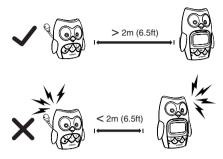

()CAUTION

- The default volume of your parent unit is level 3. If you experience high-pitched screeching noise from your baby monitor while positioning:
- Make sure your baby unit and parent unit are more than 2 metres (6.5 feet) apart, OR - Turn down the volume of your parent unit.

Operating range

The operating range of the baby monitor is up to 300 metres (1,000 feet) outdoors or 50 metres (160 feet) indoors. The actual operating range may vary depending on the environmental conditions, and other interferences such as walls, doors, and other obstructions.

ınit display screen

The link between the parent unit and the baby unit is established. The parent unit uses only the rechargeable battery pack and it needs to be recharged. The link between the parent unit and the baby unit is lost continuously for over 10 seconds. All idle parent units are being paged by the baby unit. Your selection has been saved. The parent unit is out of range JG. of the baby unit, or the baby unit is out of power. The parent unit is talking to the baby unit. The other parent unit is talking to the baby unit. The temperature detected from the selected baby unit is above the set maximum temperature. The temperature detected from the selected baby unit is below the set minimum temperature.

The real-time temperature detected by the baby unit in Celcius (°C) or Fahrenheit (°F) (e.g. 14°C or 57°F).


Using the baby monitor Power the baby unit on or off

- Press 🙂 to power on the baby unit. The
- power light turns on.
- Press and hold 0 to power off the baby unit. The power light turns off.



Power the parent unit on or off

- Press 0 to power on the parent unit. The screen turns on
- unit. The screen turns off.

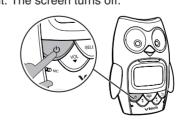

- The parent unit powers on automatically once it is connected to AC power or battery installed. The baby unit also powers on automatically once connected to AC power.
- Adjust the speaker volume for baby unit
- Press **VOL** or on the baby unit at any time

Adjust the speaker volume for parent unit You can adjust the speaker volume from VOLUME 1 to VOLUME 5, or turn it off. The speaker volume is preset to VOLUME 3.

• Press or when the parent unit is not in use.

When the speaker volume is set to off, the screen displays 🔩 .

Adjust the sound sensitivity of the baby unit You can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The sound sensitivity is preset to LEVEL 5.

_		
	Sensitivity	Description
	High sensitivity	High sensitivity level The parent unit speaker is constantly on, and you will hear all sounds (including background noises) from your baby's room.
		Medium high sensitivity level The parent unit speaker turns on for soft babbling and louder sounds from your baby. It remains quiet when your baby sleeps soundly.
		Medium sensitivity level The parent unit speaker turns on for loud babbling and louder sounds from your baby. It remains quiet when your baby makes soft sounds.
		Medium low sensitivity level The parent unit speaker turns on for crying and louder sounds from your baby. It remains quiet when your baby makes soft sounds.
	Low sensitivity	Low sensitivity level The parent unit speaker turns on for loud crying or screeching sounds from your baby. It remains quiet when your baby makes soft sounds.

- 1. Press MENU when the parent unit is not
- in use. 2. Press SELECT.
- 3. Press VOL ▲ or VOL ▼ to choose the sensitivity level.
- Press **SELECT** to confirm your selection. 4 The screen displays **SAVED** and you hear a confirmation tone.

• To enter the sensitivity menu of the parent unit, the baby unit must be turned on.

Language

You can select a language to be used in all screen displays. The screen display language is preset to English.

To change the language:

- 1. Press $\frac{MENO}{OK}$ when the parent unit is not in
- 2. Press \triangledown or \blacktriangle to scroll to LANGUAGE, then press MENL
- 3. Press \triangledown or \blacktriangle to choose your desired language, then press **MENU** to confirm your selection The screen displays SAVED. You hear a confirmation tone.

Lullaby

You can play lullables on the baby unit to comfort your baby. There are 5 lullables to choose from. The selected lullaby plays

- repeatedly for approximately 20 minutes. 1. Press $\frac{MENU}{OK}$ when the parent unit is not in
- 2. Press $\mathbf{\nabla}$ or \mathbf{A} to scroll to **LULLABY**, then press OK
- 3. Press ∇ or \blacktriangle to choose your desired lullaby, then press $\frac{MENU}{OK}$ to play the lullaby.

Sound alert

Sound alert feature works only when the parent unit is in mute. If you turn on the sound alert, the parent unit beeps

when the baby unit detects sounds which light up four sound level indicators on the parent unit. When the sound alert of the parent unit is turned on, (•) displays. The sound alert is preset to OFF

- 1. Press $\frac{MENU}{OK}$ when the parent unit is not in use
- 2. Press VOL ▲ or VOL ▼ to choose SOUND ALERT, then press OK
- 3. Press VOL ▲ or VOL ▼ to choose ON or OFF
- Press MENU OK to confirm your selection. The screen displays SAVED and you hear a confirmation tone.

The sound alert setting on each parent unit is independent

Sound sensitivity table for reference

Sound sensi	livity table	for rele
Display	Sensitivity	Descrip
LEVEL 5	High sensitivity	High se The pare constant hear all s backgrou your bab
LEVEL 4		Medium sensitiv The para turns on and loud your bab quiet wh sleeps s
LEVEL 3		Medium The pare turns on and loud your bab when yo soft sour
LEVEL 2		Medium level The pare turns on louder s baby. It r when yo soft sour
LEVEL 1	V	Low ser The pare turns on screechi

Nightlight

When this feature is turned on, the nightlight on the baby unit gives a soft glow for comfort and allows easy location in the dark.

To set the nightlight:

- 1. Press $\frac{MENU}{OK}$ when the parent unit is not in
- 2. Press $\mathbf{\nabla}$ or \mathbf{A} to scroll to **NIGHTLIGHT**, then press OK
- 3. If the current nightlight setting is **OFF**, the screen displays ON? If the current nightlight setting is ON, the screen displays OFF?.
- 4. Press $\frac{MENU}{OK}$ to confirm your selection. The screen displays SAVED. You hear a confirmation tone. -0R-

Press 5 to exit the menu. The current setting remains unchanged.

Vibration alert

You can turn on the vibration alert so that the parent unit vibrates when the baby unit detects sounds which light up four sound level indicators on the parent unit.

When the vibration alert of the parent unit is turned on, 🖳 displays. The vibration alert is preset to OFF

- 1. Press $\frac{MENU}{OK}$ when the parent unit is not in
- 2. Press \checkmark or \blacktriangle to choose VIBE ALERT, then press OK
- 3. Press $\mathbf{\nabla}$ or $\mathbf{\Delta}$ to choose **ON** or **OFF**. 4. Press $\frac{MENU}{OK}$ to confirm your selection. The screen displays **SAVED** and you hear a confirmation tone.

CNOTES

- Each time you set the vibration alert to **ON**. the parent unit vibrates briefly after you press SELECT
- The vibration alert setting on each parent unit is independent.

Night light

You can turn the night light on or off by pressing -Q- manually on the baby unit.

When the night light is turned on, the parent unit displays 🥊

Important safety

When using your equipment, basic safety

precautions should always be followed to

reduce the risk of fire, electric shock and injury

1. Follow all warnings and instructions marked

3. This product is intended as an aid. It is not

4. This product is not intended for use as a

5. Do not use this product near water. For

pool, or in a wet basement or shower

a substitute for responsible and proper adult

supervision and should not be used as such.

example, do not use it next to a bath tub, wash

bowl, kitchen sink, laundry tub or swimming

CAUTION: Use only the batteries indicated in

this manual. There may be a risk of explosion

or replacement battery pack (BT166342/

of batteries in a fire. They may explode.

Use only the adapters included with this

can seriously damage the product.

8. The power adapters are intended to be

Baby unit power adapter:

Parent unit power adapter

Output: 6V DC 450mA;

Output: 6V DC 450mA.

if a wrong type of battery is used for the parent

unit. Use only the supplied rechargeable battery

BT266342) for the parent unit. Do not dispose

product. Incorrect adapter polarity or voltage

instructions

including the following

on the product.

medical monitor

2. Adult setup is required.



Your baby unit measures the surrounding temperature. If the detected temperature falls beyond a desired temperature range, the parent unit screen will display LOW TEMP or HI TEMP. You can change the settings for the

temperature format and range, as well as turn the temperature alert on or off by the following steps.

Temperature format

You can choose to display the temperature in Celcius (°C) or Fahrenheit (°F).

- 1. Press $\frac{MENU}{OK}$ when the parent unit is not in
- 2. Press \triangledown or \blacktriangle to scroll to **TEMPERATURE**, then press OK
- 3. Press $\mathbf{\nabla}$ or \mathbf{A} to scroll to **FORMAT**, then press OK
- 4. Press ▼ or ▲ to choose CELSIUS? or **FAHRENHEIT?**, then press $\frac{MEINO}{OK}$ to save.

Minimum temperature

- 1. Press $\frac{MENU}{OK}$ when the parent unit is not in use
- 2. Press \triangledown or \blacktriangle to scroll to **TEMPERATURE**, then press OK
- 3. Press $\frac{MENU}{OK}$ again to choose **MINIMUM**.
- 4. Press $\mathbf{\nabla}$ or \mathbf{A} to choose the desired
- minimum temperature (**11-20°C**), then press OK to save.

Maximum temperature

- 1. Press $\frac{MENU}{OK}$ when the parent unit is not in use. 2. Press $\mathbf{\nabla}$ or \mathbf{A} to scroll to **TEMPERATURE**.
- then press OK 3. Press ▼ or ▲ to scroll to MAXIMUM, then press OK
- 4. Press ∇ or \blacktriangle to choose the desired maximum temperature (21-30°C), then press $\frac{MENU}{OK}$ to save.

Temperature alert

1. Press $\frac{MENU}{OK}$ when the parent unit is not in use

- 2. Press \checkmark or \blacktriangle to scroll to **TEMPERATURE**. then press OK
- 3. Press ▼ or ▲ to scroll to ALERT ON/OFF, then press OK
- 4. If the current temperature alert setting is OFF, the screen displays ON? If the current temperature alert setting is **ON**, the screen displays OFF?.
- 5. Press $\frac{MENU}{OK}$ to confirm your selection. The screen displays SAVED. You hear a confirmation tone

-OR-

Press 5 to exit the menu. The current setting remains unchanged.

ECO range

You can change the setting of the ECO range. The shorter the ECO range, the lower the radiation will be emitted, so as the operating range will be reduced.

To change the ECO range:

- 1. Press $\frac{MENU}{OK}$ when the parent unit is not in
- Press ▼ or ▲ to scroll to ECO range, then press OK
- 3. Press ▼ or ▲ to scroll to FULL RANGE, HALF RANGE, ONE ROOM, and DESK.
- 4. Press $\frac{MENU}{OK}$ to confirm your selection. The screen displays SAVED. You hear a confirmation tone.

Cautions

a blanket.

Press 5 to exit the menu. The current setting remains unchanged.

1. Use and store the product at a temperature

2. Do not expose the product to extreme cold,

3. Batteries should not be exposed to excessive

cord are always out of reach of the baby,

at least 3 feet away from the baby or cot, to

cot or playpen. Never cover the baby unit or

parent unit with anything such as a towel or

heat such as bright sunshine or fire.

4. Make sure the baby unit and the adapter

avoid a possible strangulation hazard.

6. Other electronic products may cause

5. Never place the baby unit inside the baby's

interference with your baby monitor. Try

installing your baby monitor as far away

intercoms, room monitors, televisions,

cordless telephones.

from these electronic devices as possible:

wireless routers, radios, cellular telephones,

personal computers, kitchen appliances and

heat or direct sunlight. Do not put the product

between 0°C and 40°C.

close to a heating source.

Extended ECO

You can turn on the extended ECO mode so that the radiation emitted will be lowered to the minimum, so as the operating range will be reduced to the minimum

To turn on the Extended ECO:

- 1. Press $\frac{MENU}{OK}$ when the parent unit is not in
- Press ▼ or ▲ to scroll to Extended ECO, 2. then press $\frac{MENU}{OK}$. The screen displays **ON?**
- 3. Press $\frac{MENU}{OK}$ to confirm turning on the Extended ECO. The screen displays SAVED. You hear a confirmation tone. -OR-
 - Press 5 to exit the menu. The current setting remains unchanged.

Reset

You can restore all the adjustable settings back to their original factory settings.

To reset the baby monitor:

- 1. Press $\frac{MENU}{OK}$ when the parent unit is not in use.
- 2. Press $\mathbf{\nabla}$ or $\mathbf{\Delta}$ to scroll to **RESET**, then press
- 3. The screen displays **CONFIRM?** Press $\frac{MENU}{OK}$ to confirm. The screen displays SAVED. You hear a confirmation tone. -0R-

Press 5 to exit the menu. The current setting remains unchanged.

Frequency control Transmit frequency Channels Nominal effective range Power

24

Please retain this booklet with your sales receipt as

Please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

Customer service and

product warranty

proof of the date of purchase.

IMPORTANT

Customer Service

YEAR

PRODUCT REGISTRATION vtech Visit www.vtech.co.uk/clubvtech/login

to register your VTech product By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.

PRODUCT WARRANTY

Thank you for choosing this quality product from VTer We hope it will bring many hours of entertainme magingting play and logging vered by a one year warranty fro

- The product may be returned to the place of purchase. Alternatively the product can returned to VTech Electronics Europe pic (see address below), with proof of purchas without proof of purchase no replacement will be provided.
- /Tech Electronics Europe plc will examine the product and if it is found to be defect due to faulty materials or workmanship, will replace the product at their discretion. 4. If the product covered by this warranty is damaged due to misuse, modification unauthorised repair, or because of faulty batteries, battery discharge or incom-cleatrical connections. then this warranty because usid
- s warranty is personal to the original purchaser and is not transfe Breakages to the LCD screen are not covered by the warranty.
- Returns to VTech Electronics Europe plc should include a cheque or postal order 1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows packed carefully to avoid damage in transit (Please do not include batteries or adapt Please include details of the fault together with your name and address. D. To keep an online record of your warranty, please register your product online at wy vtech couk/warranty.

tech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, Wes allam, DE7 6HE WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFEC

warranty is valid for the UK and Eire only. For products purchased UK and Eire, please contact your local distributor or place of pu

- correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet 9. For pluggable equipment, the socket-outlet
- shall be installed near the equipment and shall be easily accessible.
- 10.Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 11.Unplug the power cords before replacing batteries
- 12.Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation.
- 13.Do not allow anything to rest on the power cords. Do not install this product where the

cords may be walked on or crimped. 14. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company

15.Do not overload wall outlets or use an

extension cord. 16.Do not place this product on an unstable table, shelf, stand or other unstable surfaces.

17. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed

near or over a radiator or heat register. 18 Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.

19.To reduce the risk of electric shock, do not disassemble this product, but take it to an authorised service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.

20.You should test the sound reception every time you turn on the units or move one of the components.

21.Periodically examine all components for damage.

they do not play with the product.

24. The product is not intended for use by

22.Be aware of possible loss of privacy while using public airwayes. Conversations may be picked up by other nursery monitors, cordless phones, scanners, etc.

23.Children should be supervised to ensure that

persons (including children) with reduced

unless they have been given supervision or

instruction concerning use of the appliance

SAVE THESE INSTRUCTIONS

physical, sensory or mental capabilities,

by a person responsible for their safety.

or lack of experience and knowledge,

Talk to the baby unit

unit.

ONOTES

ONOTES

unit.

You can broadcast messages from a parent unit to the baby unit and the other parent unit. If you have two parent units, you can use both of them at the same time to talk to the baby

• Press and hold (15 on the side of the parent unit. The screen displays (4 when the voice connection to the baby unit is made. Speak towards the microphone on the parent unit. Your voice is broadcast to the baby unit and the other parent unit.

• When a parent unit is talking to the baby unit, it is also broadcast to the other parent unit. However, sounds from the baby unit cannot be transmitted to the parent units at the moment. If speaker volume of the parent unit has been turned off before the talk, it will change to default volume level after the talk finished.

Find/page the parent unit

Use this feature to find misplaced parent units. 1. Press •) on the baby unit. All idle parent units ring and display PAGING.

2. To end paging, press any key on the parent unit, or press •)) on the baby unit.

Paging rings all parent units even if the speaker volume of parent unit is set to VOLUME OFF. The baby unit cannot page any parent unit that is turned off, out of range or talking to the baby

General product care

- To keep this product working well and looking good, follow these guidelines Avoid putting it near heating appliances and devices
- that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose it to direct sunlight or moisture. Avoid dropping the product or treating it roughly.
- Clean with a soft cloth.
- DO NOT immerse the parent unit and the baby unit in water and do not clean them under the tap.
- DO NOT use cleaning spray or liquid cleaners.

Storage

When you are not going to use the baby monitor for some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place

Frequently asked questions

Why does the baby monitor not respond normally?

Why doesn't

unit?

unit?

baby

- . Disconnect the power to the baby unit and the parent unit. . Remove the batteries in the parent unit. Then, install the batteries again.
- 3. Wait a few minutes before connecting power back to the baby unit and the parent unit. 4. Turn on the baby unit and the

Try the following (in the order

sted) for common cure:

l wr

Wł

the

are

inte

- parent unit. 5. Wait for the parent unit to synchronise with the baby unit
- Allow up to one minute for this to take place. Perhaps the rechargeable battery

of the parent unit is empty and the the screen of parent unit is not connected to the the parent unit power. Insert the appliance plug go on when I nto the parent unit and put the switch on the adapter in a wall socket Why doesn't the Perhaps the baby unit is not POWER light connected to the power. Connect

the baby unit to the power. of the baby unit go on when I switch on the Why does the The units may be too close to

	baby monitor produce a high-pitched noise?	each other. Make sure the parent unit and the baby unit are more than 2 metres (6.5 feet) away from each other.		
	Why does the parent unit react too quickly to other sounds?	The baby unit also detects other sounds than those of your baby. Adjust the sensitivity level to a lower level or adjust the speaker volume on the parent unit.		
	Why don't I hear a sound/Why can't I hear my	The volume of the parent unit may have set too low. Press		
	baby cry?	You may have set a low sound sensitivity level. See Adjust the sound sensitivity of the baby		

unit to change the setting

hy does the rent unit ep?	If the parent unit is in mute and the sound alert feature is on, there is sound detected from the baby unit.		
	The baby unit may be out of range. Move the parent unit closer to the baby unit (but not less than 6.5 feet).		
	If the parent unit is powered by the provided battery, it may not have enough charge for the parent unit to perform normally. Charge the battery in the parent unit for up to 11 hours.		
hy can't I tablish a con- ction? Why is e connection	The baby unit may be out of range. Move the parent unit closer to the baby unit (but not less than 6.5 feet).		
st every now d then? Why e there sound erruptions?	Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible.		

Technical specifications

Crystal controlled PLL synthesizer Baby unit: 2406 - 2475 MHz Parent unit: 2406 - 2475 MHz

Actual operating range may vary according to environmental conditions at the time of use.

Parent unit battery requirements CORUN: NI-MHAAA550X2 2.4V 550mAh Ni-MH, or GPI: VTRHCH53N006

> 2.4V 550mAh Ni-MH Baby unit power adaptor: VTPL Model: VT04EEU06045 Input: 100-240VAC, 50/60Hz, 150mA Output: 6VDC, 450mA

> Tenpao Model: S003GV0600045 Input: 100-240VAC, 50/60Hz, 150mA Output: 6VDC, 450mA

(UK version)

VTPL Model: VT04EUK06045 Input: 100-240VAC, 50/60Hz, 150mA. Output: 6VDC, 450mA

Tenpao Model: S003GB0600045 Input: 100-240VAC, 50/60Hz, 150mA, Output: 6VDC, 450mA

Parent unit power adaptor: VTPL Model: VT04EEU06045 Input: 100-240VAC, 50/60Hz, 150mA, Output: 6VDC, 450mA Or

Tenpao Model: S003GV0600045 Input: 100-240VAC, 50/60Hz, 150mA, Output: 6VDC, 450mA

(UK version) VTPL Model: VT04EUK06045 Input: 100-240VAC, 50/60Hz, 150mA,

Output: 6VDC, 450mA Or

Tenpao Model: S003GB0600045 Input: 100-240VAC, 50/60Hz, 150mA, Output: 6VDC, 450mA

For pluggable equipment, the socket-outlet (power adaptor) shall be installed near the equipment and shall be easily accessible.

Disposal of batteries and product

The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health

The chemical symbols Hg. Cd or Pb. where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pn) set out in Battery Directive

(2006/66/EC). The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly

Declaration of Conformity

This product is intended for use within Europe This equipment compiles with the essential requirements for the Radio Equipment and elecommunications Terminal Equipment Directive 1999/5/EC.

Vtech Telecommunications Ltd. hereby declares that this Digital Audio Baby Monitor BM2300 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC

The Declaration of Conformity for the BM4200 is available from http://www.vtech.com/rtte-directive



Credits:

The *Background Noise* sound file was created by Caroline Ford, and is used under the Creative Commons license. The Stream Noise sound file was created by Caroline Ford, and

is used under the Creative Commons license. The Crickets At Night sound file was created by Mike Koenig, and is used under the Creative Commons license

The Heart Beat sound file was created by Zarabadeu, and is used under the Creative Commons license



