



Instruction Manual

Stretch & Play Colors Chameleon™

 


INTRODUCTION

Thank you for purchasing the **VTech® Stretch & Play Colors Chameleon™**! Move Chameleon to hear playful sounds and sweet songs. Hear music, animal facts, learn about colors or make recordings.

Stretch & Play Body

On/Off Button

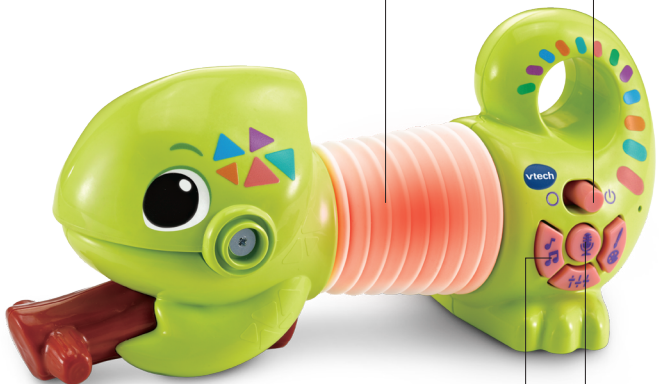

Recording Button

3 Mode Buttons

INCLUDED IN THE PACKAGE

- VTech® Stretch & Play Colors Chameleon™
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

Unlock the Packaging Locks:

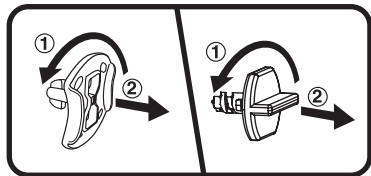

- ① Turn the packaging locks counterclockwise several times.
- ② Pull out and discard the packaging locks.

GETTING STARTED

 
ACTIVATE NORMAL PLAY MODE

The unit is in Try-Me mode. To exit this mode, follow the steps:

While pressing the **Sing-along Mode** and **Learning Mode**



Buttons, slide the **On/Off Selector** from the **Off** to the **On** position at the right.

You will hear three sounds when the normal play mode is activated.

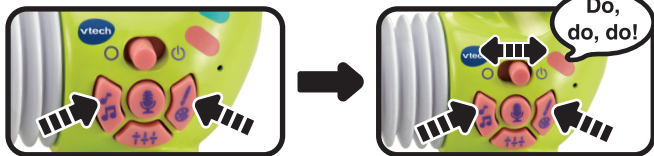

Battery Removal and Installation

  1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new 1.5V AAA (LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

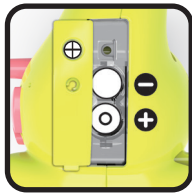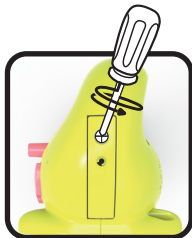



~~WARNING:~~

~~Adult assembly required for battery installation.~~

~~Keep batteries out of reach of children.~~



~~ATTENTION :~~

~~Les piles ou accumulateurs doivent être installés par un adulte.~~

~~Tenir les piles ou accumulateurs hors de portée des enfants.~~

~~IMPORTANT: BATTERY INFORMATION~~

- ~~• Insert batteries with the correct polarity (+ and -).~~
- ~~• Do not mix old and new batteries.~~
- ~~• Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.~~
- ~~• Only batteries of the same or equivalent type as recommended are to be used.~~
- ~~• Do not short-circuit the supply terminals.~~
- ~~• Remove batteries during long periods of non use.~~
- ~~• Remove exhausted batteries from the toy.~~
- ~~• Dispose of batteries safely. Do not dispose of batteries in fire.~~

~~RECHARGEABLE BATTERIES:~~

- ~~• Rechargeable batteries are only to be charged under adult supervision.~~
- ~~• Do not charge non-rechargeable batteries.~~

~~IMPORTANT : INFORMATIONS CONCERNANT LES PILES~~

- ~~• Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.~~
- ~~• Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.~~
- ~~• Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.~~
- ~~• Seules des piles du type recommandé doivent être utilisées.~~
- ~~• Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).~~
- ~~• Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.~~
- ~~• Enlever les piles ou les accumulateurs usagés du jouet.~~
- ~~• Ne les jeter ni au feu ni dans la nature.~~

~~PILES RECHARGEABLES :~~

- ~~• Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.~~
- ~~• Ne pas tenter de recharger des piles non rechargeables.~~

~~Note:~~

~~If the unit repeatedly powers down or the light flashes then fades out, we suggest changing the batteries.~~

PRODUCT FEATURES

1. On/Off Button

To turn the unit **On**, slide the button to the **On**  position.

To turn the unit **Off**, slide the button to the **Off**  position.

2. Mode Buttons

Press one of **3 Mode Buttons** to choose Sing along, Remix or Learning mode.

3. Record & Repeat

Press and hold the button to record sounds, press it again to play your recording.

4. Stretch & Play Body

Move back and forth to change the pitch of songs, make fun sounds, hear note by note singing, explore colors and play back recordings. Light will flash with the sounds.

5. Automatic Shut-Off

To preserve battery life, the unit will automatically power off after several minutes without input. The unit can be turned on again by switching the **On/Off Button** to the **On**  position.

ACTIVITIES

1. Fun Sounds Mode

Slide the **On/Off Button** to the **On**  position to enter this mode. Move Chameleon's body to hear fun sounds.



2. Sing-along Mode

Press to hear songs. Move Chameleon back and forth to add in fun sounds. When a song is finished, move the body again to hear Chameleon sing note by note. Press the button again to change the song.



3. Remix Mode

Press to hear songs, then move Chameleon back and forth to change the sound. Press the button again to hear a new song.



4. Learning Mode



Press to learn about colors and Chameleon facts. Move Chameleon to explore 6 different colors. Move Chameleon's body to add fun sounds into the song.



5. Recording Mode



Press and hold the button until you hear a beep. Continue holding while you record. Press again or move Chameleon back and forth to playback your recording.



SONG LYRICS

Song 1

Hands together, hands apart.
Sing and clap with all your heart!
Stretch and pull, now watch me glow.
Move and sing as colors flow.
Hands together, hands apart.
Sing and clap with all your heart!

Song 2.

~~Pink and purple add some bling.~~
~~Shake, shake, shake, let's jump and sing.~~
~~Yellow, green, then red and blue,~~
~~A world of color just for you!~~
~~Freeze...now dance, it's time to move.~~
~~Shake, shake, shake get in the groove!~~

Song 3.

~~Red, pink, yellow, green and blue.~~
~~Red, pink, yellow, green and blue.~~
~~Have you ever, ever seen,~~
~~Each and every single hue?~~

Song 4.

~~I am a chameleon.~~
~~I change colors just for fun.~~
~~Red and yellow, sometimes green,~~
~~Each and every color seen.~~
~~I turn purple, pink and blue,~~
~~All the colors just for you.~~

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

~~IMPORTANT NOTE:~~

~~If the problem persists, please contact our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.~~

Supplier's Declaration of Conformity **47 CFR § 2.1077 Compliance Information**

Trade Name:	VTech®
Model:	5882
Product Name:	Stretch & Play Colors Chameleon™
Responsible Party:	VTech Electronics North America, L.L.C.
Address:	1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.
CAN ICES(B)/NMB(B)



~~Visit our website for more
information about our products,
downloads, resources and more.~~

~~***vtechkids.com***
vtechkids.ca~~

~~Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty~~

